

2016 WORK FOOTWEAR
CRAFTED BY
HAND
SINCE
1892
Thorogood
SHOES

SEARCH BY STOCK NUMBER

Men's Non-Safety					
STOCK NUMBER	PAGE				
814-3566	15	804-4205	10	804-4810	29
814-4008	9	804-4208	11	804-4823	18
814-4009	9	804-4210	10	804-4831	34
814-4200	7	804-4312	32	804-4841	34
814-4201	8	804-4320	33	804-4860	22
814-4203	7	804-4364	10	804-4890	23
814-4208	8	804-4367	17	804-4900	28
814-4233	6	804-4368	17	804-6000	23
814-4266	7	804-4369	17	804-6064	31
814-4269	8	804-4372	13	804-6201	11
814-4355	6	804-4374	12	804-6444	25
814-4364	8	804-4375+	12	804-6511	32
814-4370	13	804-4378+	12	804-6711	19
814-4372	13	804-4379+	12		
814-4440	25	804-4440	25		
814-4447	24	804-4441+	27		
814-4449	24	804-4445	25		
814-4516	5	804-4446	24		
814-4518	5	804-4448	24		
814-4549	20	804-4450+	27		
814-4550	20	804-4456+	27		
814-4960	22	804-4459+	27		
814-6201	7	804-4460	26		
814-6233	6	804-4478	11		
		804-4518	5		
		804-4531	34		
		804-4541	34		
		804-4580	23		
		804-4614+	32		
		804-4616+	33		
		804-4618+	33		
		804-4650	28		
		804-4655+	10		
		804-4706	14		
		804-4708	14		
		804-4710	14		
		804-4711	19		
		804-4718	14		
		804-4721	19		
		804-4760	22		
		804-4808	29		

Men's Safety					
STOCK NUMBER	PAGE				
804-3310+	21				
804-3366+	21				
804-3510	15				
804-3556	28				
804-3566	15				
804-4035	31				
804-4037	31				
804-4043	33				
804-4061	31				
804-4132	32				
804-4200	11				
804-4203	18				
804-4204	18				

Women's Non-Safety					
STOCK NUMBER	PAGE				
514-4200	7				

Women's Safety					
STOCK NUMBER	PAGE				
504-4406	22				
804-4035	31				
804-4061	31				
804-4312	32				
804-4320	33				
804-4541	34				
804-4650	28				
804-4711	19				
804-4808	29				
804-4823	18				
804-4900	28				
804-6064	31				
804-6511	32				

Shoe In®					
STOCK NUMBER	PAGE				
161-0777	35				
161-7771	35				
161-0888	35				
161-0999	35				
161-0555	35				

ORDER NOW



EMAIL ORDERS:

csd@weinbrennerusa.com



WEBSITE ORDERS:
DEALERS ONLY

weinbrennerusa.com/dealer

Log in or create your account here



PHONE ORDERS:

800-826-0002





Dear Loyal Customer,

On behalf of the Employee Owners of the Weinbrenner Shoe Company, I am proud to present our 2016 Thorogood Catalog.

Originating in 1892, Weinbrenner Shoe Company is the parent company, and manufacturing arm of the Thorogood Brand of work, uniform and fire footwear.

Our dedication to craftsmanship, quality, and innovation, defines the high quality of our footwear that our customers have come to expect. Our goal is to provide footwear that represents the best value in today's marketplace.

From the beginning, our core philosophy has been that quality and the origin of the product, always comes first. Our American Heritage styles are proudly hand-crafted by UFCW union members and have been since 1943. Thorogood's American Heritage collection is all about quality and a kind of craftsmanship that is rare in today's world.

Our quality-sourced footwear also meets the demands of our founder's standards. Technological advancements in safety and comfort are featured in these styles – all managed, in every detail, from our offices in Wisconsin.

Thank you for allowing us this opportunity to provide you with our 2016 Thorogood Catalog.

Sincerely,

Richard M. DiFalco
VICE PRESIDENT – INDUSTRIAL SALES
THOROGOOD SHOES

The Thorogood brand is the occupational footwear division of the Weinbrenner Shoe Company (est. 1892). With factories in Merrill and Marshfield, Wisconsin, we manufacture **Made in USA** products that are either Berry Compliant (100% US-made with US-made components) or Manufactured in the USA with globally-sourced components.



AMERICAN HERITAGE

• MADE IN USA* •

814-4516

6" Plain Toe Sport Boot
Non-Safety



DUAL-DENSITY
OUTSOLE



SOLE 1



- » Black walnut oil-tanned leather
- » Removable polyurethane footbed on Poron® comfort cushion outsole
- » Dual-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction




poron

MEN'S | D 7-12, 13, 14 | EE 8-12, 13, 14

NEW

814-4518

8" Plain Toe
Non-Safety

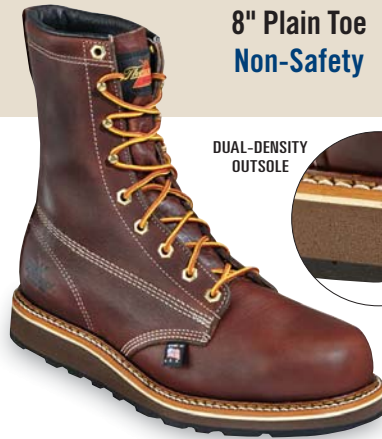

DUAL-DENSITY
OUTSOLE



SOLE 1



- » Black walnut oil-tanned leather
- » Goodyear storm welt construction
- » Removable polyurethane footbed on Poron® comfort cushion outsole
- » Rubber midsole
- » Dual-density polyurethane MAXwear Wedge™ outsole
- » ASTM F2892-11 Standard Specification for Performance Requirements for Soft Toe Protective Footwear



poron


MEN'S | D 7-12, 13, 14 | EE 8-12, 13, 14

804-4518

8" Plain Toe
Safety Toe



DUAL-DENSITY
OUTSOLE

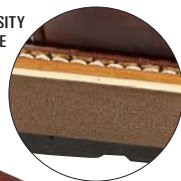

SOLE 1




- » Black walnut oil-tanned leather
- » Memory cushion insole
- » Removable polyurethane footbed on Poron® comfort cushion outsole
- » Dual-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction




poron

MEN'S | D 7-12, 13, 14 | EE 8-12, 13, 14

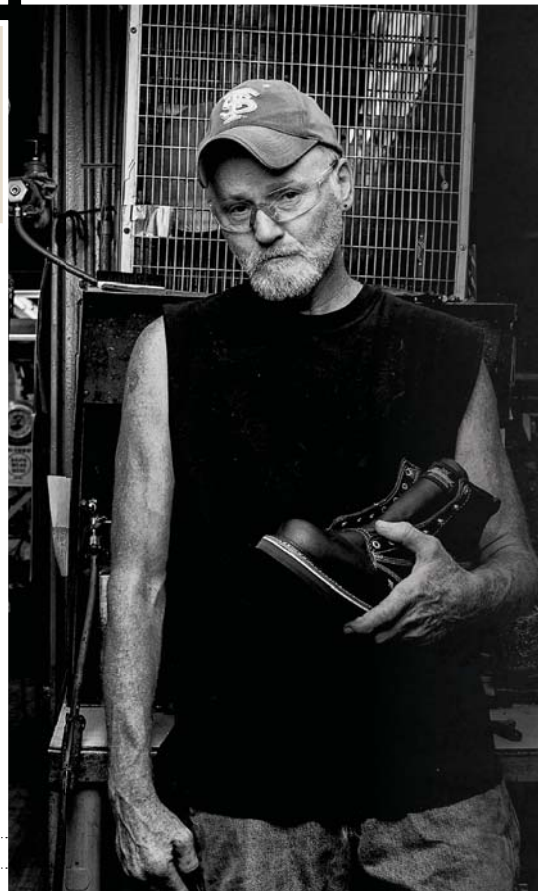

*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

AMERICAN HERITAGE • MADE IN USA*

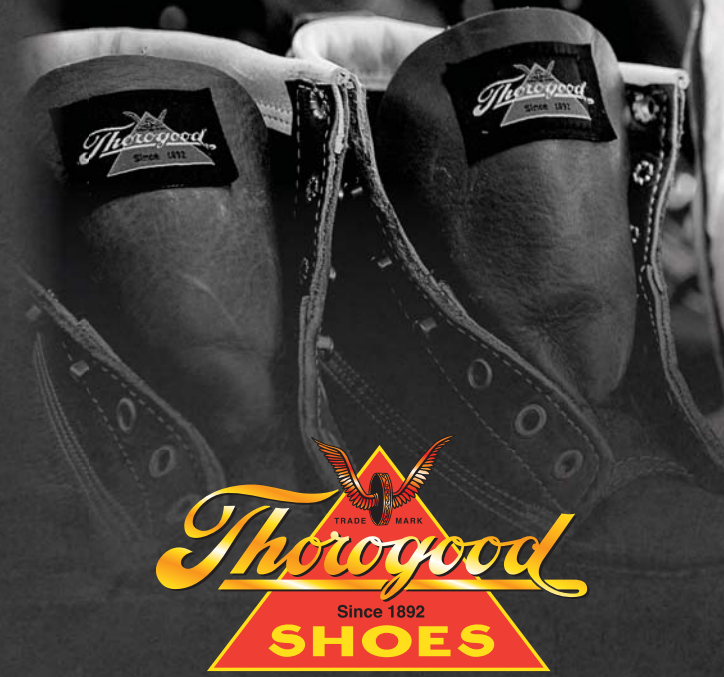

AMERICAN HERITAGE
WEDGES

814-4355

6" Plain Toe
Non-Safety



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole

- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 5½-12, 13, 14 | EE 6-12, 13, 14 | 4E 8-12

814-6233

Lace-to-Toe Roofer
Non-Safety



SOLE 2



889-6007



- » Black oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 6-12, 13, 14 | EE 6-12, 13

814-4233

Lace-to-Toe Roofer
Non-Safety



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 6-12, 13, 14 | EE 6-12, 13



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

814-4200 MEN'S
514-4200 WOMEN'S

6" Moc Toe
Non-Safety



SOLE 2



889-6007

- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | B 9-12, 13 | D 5-12, 13, 14 | EE 6-12, 13, 14 | WOMEN'S | M 6-9, 10 | W 6-9, 10

814-6201

6" Moc Toe
Non-Safety



SOLE 2



889-6007

- » Black oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 5-12, 13, 14 | EE 6-12, 13, 14

814-4203

6" Brown Moc Toe
Non-Safety



SOLE 2



889-6007

- » Dirty brown crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 5-12, 13, 14 | EE 8-12, 13, 14

814-4266

6" Moc Toe
Non-Safety



SOLE 3



889-3004

- » Black walnut oil-tanned leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 6-12, 13, 14 | EE 7-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

AMERICAN HERITAGE • WEDGES

AMERICAN HERITAGE - WEDGES

814-4364

8" Plain Toe
Non-Safety



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | B 9-12, 13, 14 | D 7-12, 13, 14 | EE 7-12, 13, 14 | 4E 8-12

814-4201

8" Moc Toe
Non-Safety



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | B 9-12, 13 | D 7-12, 13, 14 | EE 7-12, 13, 14 | 4E 8-12

814-4269

8" Plain Toe
Non-Safety



SOLE 3



889-3004



- » Black walnut oil-tanned leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 7-12, 13, 14 | EE 7-12, 13, 14

814-4208

Wellington
Non-Safety



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 7-12, 13, 14 | EE 7-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

AMERICAN HERITAGE • WEDGES

814-4008

8" Waterproof
Non-Safety



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



MEW'S | D 8-12, 13, 14 | EE 8-12, 13, 14

814-4009

8" Waterproof / Insulated Plain Toe
Non-Safety



SOLE 2



889-6007




- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



MEW'S | D 7-12, 13, 14 | EE 8-12, 13, 14 | EEE 8-12, 13

AMERICAN HERITAGE - WEDGES

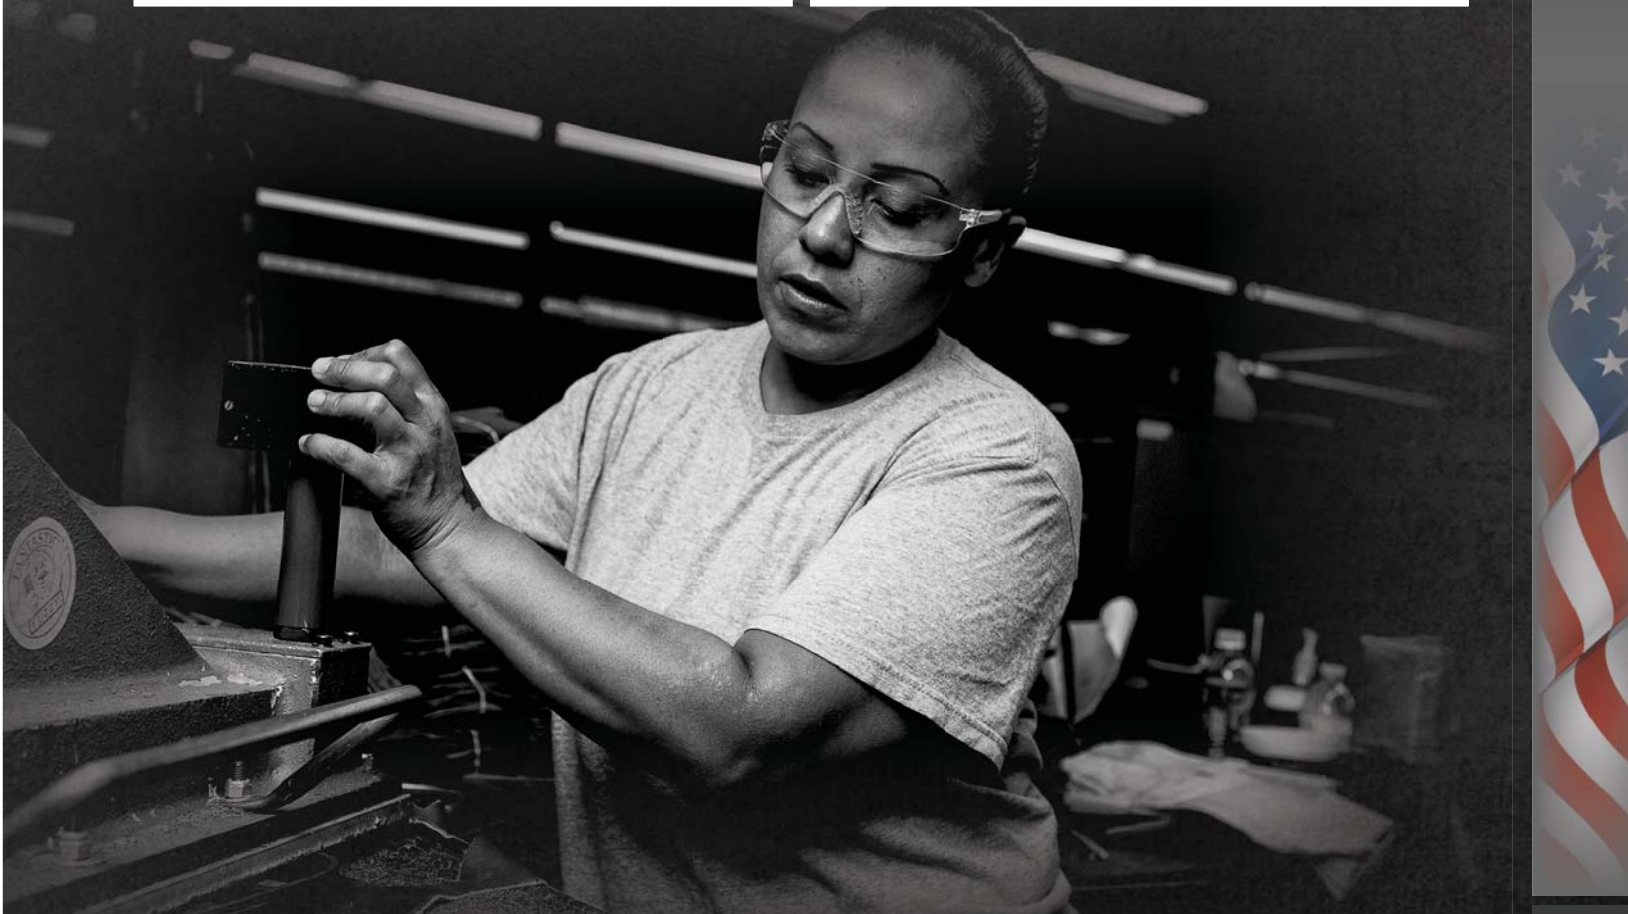

*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.


AMERICAN HERITAGE • WEDGES (SAFETY TOE)

804-4655+

6" Emperor Toe
Composite Safety Toe



MORE SPACIOUS TOE!

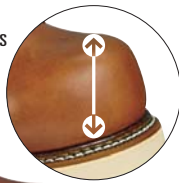

SOLE 2



889-7024



- » Tobacco oil-tanned leather
- » Removable slow recovery polyurethane footbed
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction

75 EH SR

+ COMP 75 SAFETY TOE

MEN'S | D 7-12, 13, 14 | EE 7-12, 13, 14

804-4364

8" Plain Toe
Safety Toe



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction

75 EH SR

poron

MEN'S | D 7-12, 13, 14 | EE 7½-12, 13, 14 | EEE 8-12, 13

804-4210

8" Waterproof Plain Toe
Composite Safety Toe



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction

75 EH WP SR



WATERPROOF + COMP 75 SAFETY TOE

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4205

Wellington
Safety Toe



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction

75 EH SR

poron

MEN'S | D 7-12, 13, 14 | EE 8-12, 13, 14



AMERICAN HERITAGE • WEDGES (SAFETY TOE)

AMERICAN HERITAGE - WEDGES (SAFETY TOE)

804-4200

6" Moc Toe
Safety Toe



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-6201

6" Moc Toe
Safety Toe



SOLE 2



889-6007



- » Black oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 8-12, 13 | EE 8½-12, 13

804-4208

8" Moc Toe
Safety Toe



SOLE 2



889-6007



- » Tobacco oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 6-12, 13, 14, 15 | EE 7½-12, 13, 14

804-4478

8" Moc Toe
Safety Toe

NEW



SOLE 2



- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear Wedge™ outsole
- » Goodyear storm welt construction



poron

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

AMERICAN HERITAGE • CLASSICS (EH)

804-4374

NEW

6" Plain Toe
Safety Toe



SOLE 4



- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4379+

8" Plain Toe
Safety Toe



SOLE 4



889-6007

- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



poron

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4375+

6" Moc Toe
Safety Toe



SOLE 4



889-6007

- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



poron

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4378+

8" Moc Toe
Safety Toe



SOLE 4



889-6007

- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction




poron

MEN'S | D 7-12, 13, 14 | EE 7-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

AMERICAN HERITAGE • CLASSICS (EH)

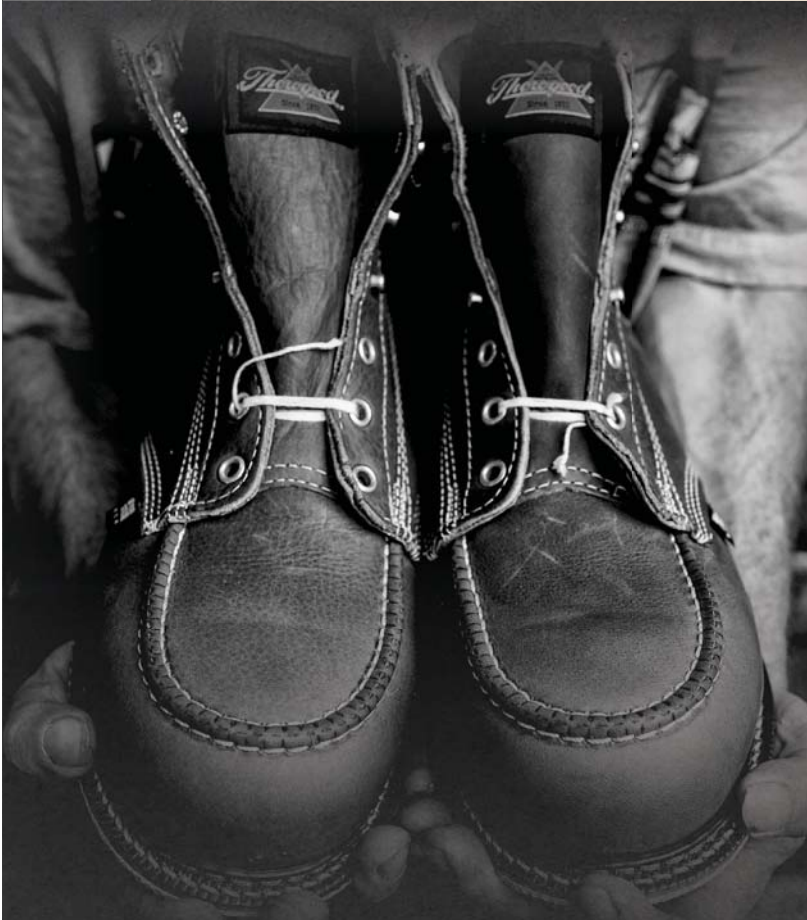

814-4370
6" Plain Toe
Non-Safety

NEW



- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



MEN'S D 8-12,13,14 EE 8-12,13,14

804-4372
11" Wellington
Safety Toe

NEW



- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



MEN'S D 8-12,13,14 EE 8-12,13,14

814-4372
11" Wellington
Non-Safety

NEW



- » Trail crazyhorse leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



MEN'S D 8-12,13,14 EE 8-12,13,14



*Our **Made in USA** footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

SAFETY TOE

804-4706

NEW

6" Waterproof
Safety Toe

SOLE 5



- » Brown waterproof, tumbled, oiled, full grain leather
- » Goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » Thorogood's exclusive single density MAXwear 90 outsole

X-STREAM
WATERPROOF

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4708

NEW

8" Waterproof
Safety Toe

SOLE 5



- » Brown waterproof, tumbled, oiled, full grain leather
- » Goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » Thorogood's exclusive single density MAXwear 90 outsole

X-STREAM
WATERPROOF

MEN'S | D 8-12, 13, 14 | EEE 8-12, 13, 14

804-4710

NEW

11" Waterproof Wellington
Safety Toe

SOLE 5



- » Brown waterproof, tumbled, oiled, full grain leather
- » Goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » Thorogood's exclusive single density MAXwear 90 outsole

X-STREAM
WATERPROOF

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4718

NEW

8" Waterproof
Thinsulate B-400 Insulation
Safety Toe

SOLE 5



- » Brown waterproof, tumbled, oiled, full grain leather
- » Goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » Thorogood's exclusive single density MAXwear 90 outsole
- » B-400 Thinsulate Insulation

X-STREAM
WATERPROOF3M
Thinsulate
Ultra
INSULATION

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14



LOGGERS

804-3566

NEW

6" Lace-to-Toe Logger, Waterproof Safety Toe



SOLE 21



- » Waterproof apache crazyhorse leather
- » Leather Goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » Vibram® Tacoma outsole



X-STREAM WATERPROOF

MEN'S | D 8-12, 13, 14 | EEE 8-12, 13, 14

814-3566

NEW

6" Lace-to-Toe Logger, Waterproof Non-Safety



SOLE 21



- » Waterproof apache crazyhorse leather
- » Leather Goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » Vibram® Tacoma outsole



X-STREAM WATERPROOF

MEN'S | D 8-12, 13, 14 | EEE 8-12, 13, 14

804-3510

NEW

10" Lace-to-Toe Logger, Waterproof Thinsulate B-400 Insulation Safety Toe



SOLE 21




- » Waterproof apache crazyhorse leather
- » Leather goodyear storm welt construction
- » Removable slow recovery polyurethane footbed
- » Aztec premium lining
- » B-400 Thinsulate insulation
- » Vibram® Tacoma outsole



X-STREAM WATERPROOF

3M Thinsulate Ultra INSULATION

MEN'S | D 8-12, 13, 14 | EEE 8-12, 13, 14

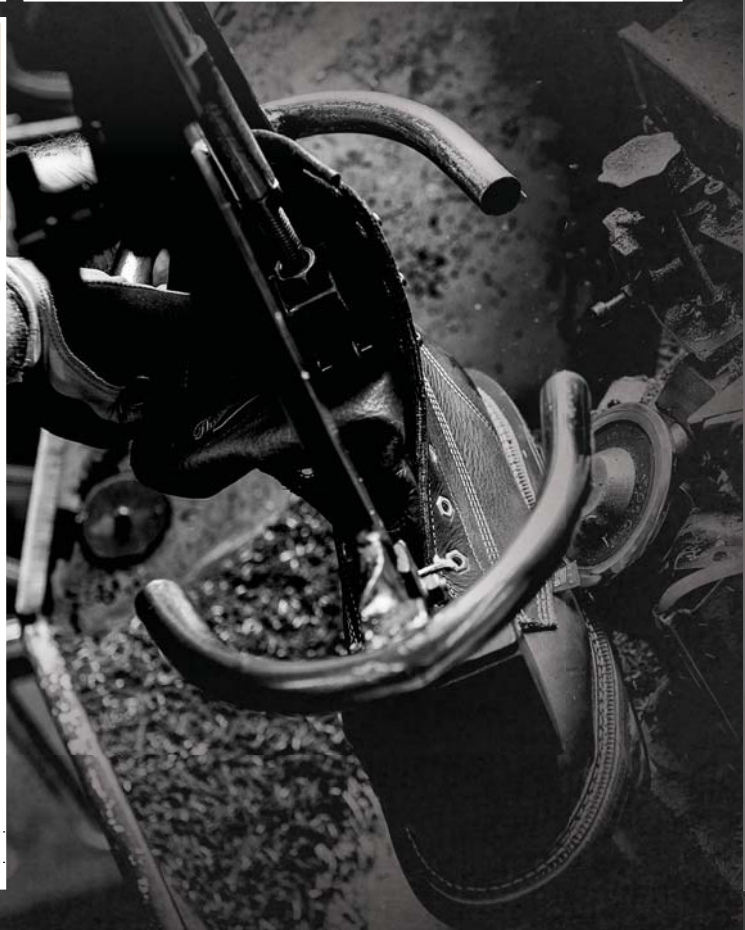


*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.




EMPEROR TOE

Composite Safety Toe
with Wiggle Room

- Allows toes to flex and move
- Eliminates toe compression and pinching

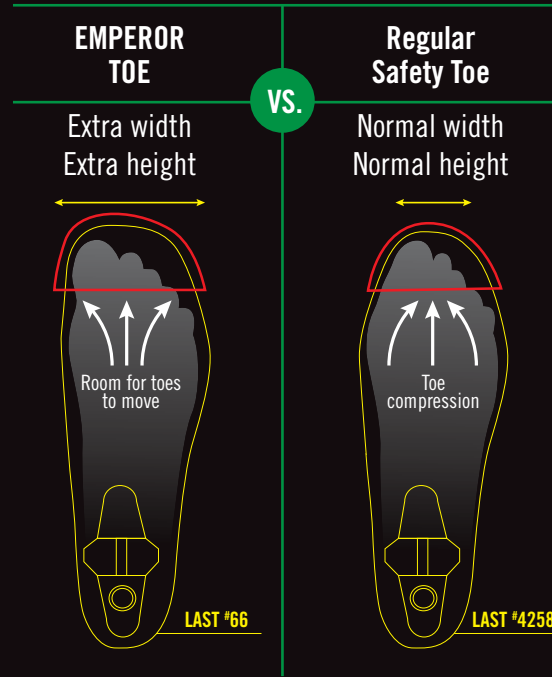

Wider AND More Spacious

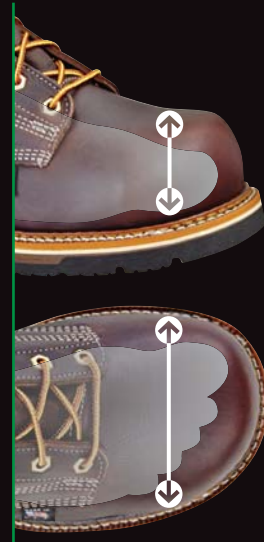



804-4367

6" Emperor Toe
Composite Safety Toe



889-7024

- » Black walnut oil-tanned leather
- » Removable slow recovery polyurethane footbed
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



75 EH SR

poron + COMP 75 SAFETY TOE

MEN'S D 7-12, 13, 14 EE 8-12, 13, 14 4E 8-12, 13, 14

804-4368

8" Emperor Toe
Composite Safety Toe



889-7024

- » Black walnut oil-tanned leather
- » Removable slow recovery polyurethane footbed
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



75 EH SR

poron + COMP 75 SAFETY TOE

MEN'S D 7-12, 13, 14 EE 8-12, 13, 14 4E 8-12, 13, 14

804-4369

Wellington Emperor Toe
Composite Safety Toe



889-7024

- » Black walnut oil-tanned leather
- » Removable slow recovery polyurethane footbed
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



75 EH SR

poron + COMP 75 SAFETY TOE

MEN'S D 7-12, 13, 14 EE 8-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

AMERICAN HERITAGE • CLASSICS (EH)

804-4203

6" American Heritage
Safety Toe




SOLE 7



889-6007

- » Black walnut oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole

- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX poron

MEN'S | B 9-12, 13 | D 7-12, 13, 14, 15, 16, 17, 18 | EE 8-12, 13, 14 | EEE 8-12, 13, 14, 15, 16, 17, 18

804-4204

8" American Heritage
Safety Toe



SOLE 7



889-6007

- » Black walnut oil-tanned leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX poron

MEN'S | B 9-12, 13 | D 7-12, 13, 14, 15, 16, 17, 18 | EE 8-12, 13, 14 | EEE 8-12, 13, 14, 15, 16, 17, 18

804-4823

▲ DUAL-GENDER SIZING (SEE CHART)

“Oil Rig” Wellington
Safety Toe



SOLE 7



889-8000

- » Mahogany oil rig leather
- » Removable dual-density polyurethane SHOCK ZONE footbed with air flow vents
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX poron

▲ MEN'S | B 4-12, 13 | D 4-12, 13, 14, 15 | EE 7½-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.



804-4711

▲ DUAL-GENDER SIZING [SEE CHART]

6" Sport Boot
Safety Toe



- » Black walnut oil-tanned full-grain leather
- » Removable polyurethane *Ultimate® SD* footbed
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX

▲ MEN'S	A 9-11, 12	B 5-12, 13	C 9-12, 13	D 4-12, 13, 14, 15, 16, 17, 18
	E 6-12, 13, 14, 15, 16, 17, 18	EEE 6-12, 13, 14, 15, 16, 17, 18		

804-6711

6" Sport Boot
Safety Toe



- » Black oil-tanned full-grain leather
- » Removable polyurethane *Ultimate® SD* footbed
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX

MEN'S	D 7-12, 13	E 8-12, 13	EEE 8-12, 13
-------	------------	------------	--------------

804-4721

8" Sport Boot
Safety Toe



- » Black walnut oil-tanned full-grain leather
- » Removable polyurethane *Ultimate® SD* footbed
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX

MEN'S	B 9-12, 13	D 7-12, 13, 14	E 8-12, 13, 14	EEE 7-12, 13
-------	------------	----------------	----------------	--------------



DUAL GENDER SIZING

▲ For Women's size, order Men's size below it on chart. (example: Women's 6, order Men's 4)


WOMEN'S	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12							
MEN'S	3	3½	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	13	14	15

AMERICAN HERITAGE • CLASSICS (NON-SAFETY)

AMERICAN HERITAGE - CLASSICS (NON-SAFETY)

814-4550

6" American Heritage
Non-Safety

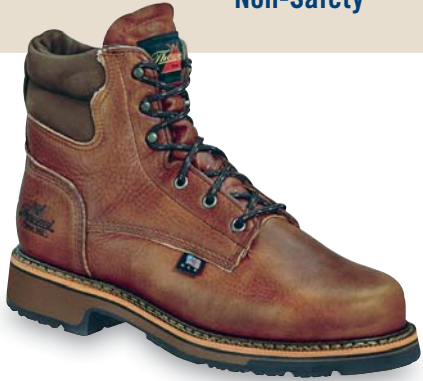

SOLE 7



889-6007



- » Tobacco oil-tanned full-grain leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction



DRI-LEX poron

MEN'S B 9-12, 13 D 7-12, 13, 14, 15, 16, 17, 18 EE 7-12, 13, 14, 15, 16, 17, 18 4E 8-12

814-4549

8" American Heritage
Non-Safety



SOLE 7



889-6007



- » Tobacco oil-tanned full-grain leather
- » Removable dual-density Ultimate Shock Absorption™ footbed on Poron® comfort cushion insole
- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction




DRI-LEX poron

MEN'S B 9-12, 13 D 7-12, 13, 14, 15, 16, 17, 18 EE 8-12, 13, 14, 15, 16, 17, 18 4E 8-12



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

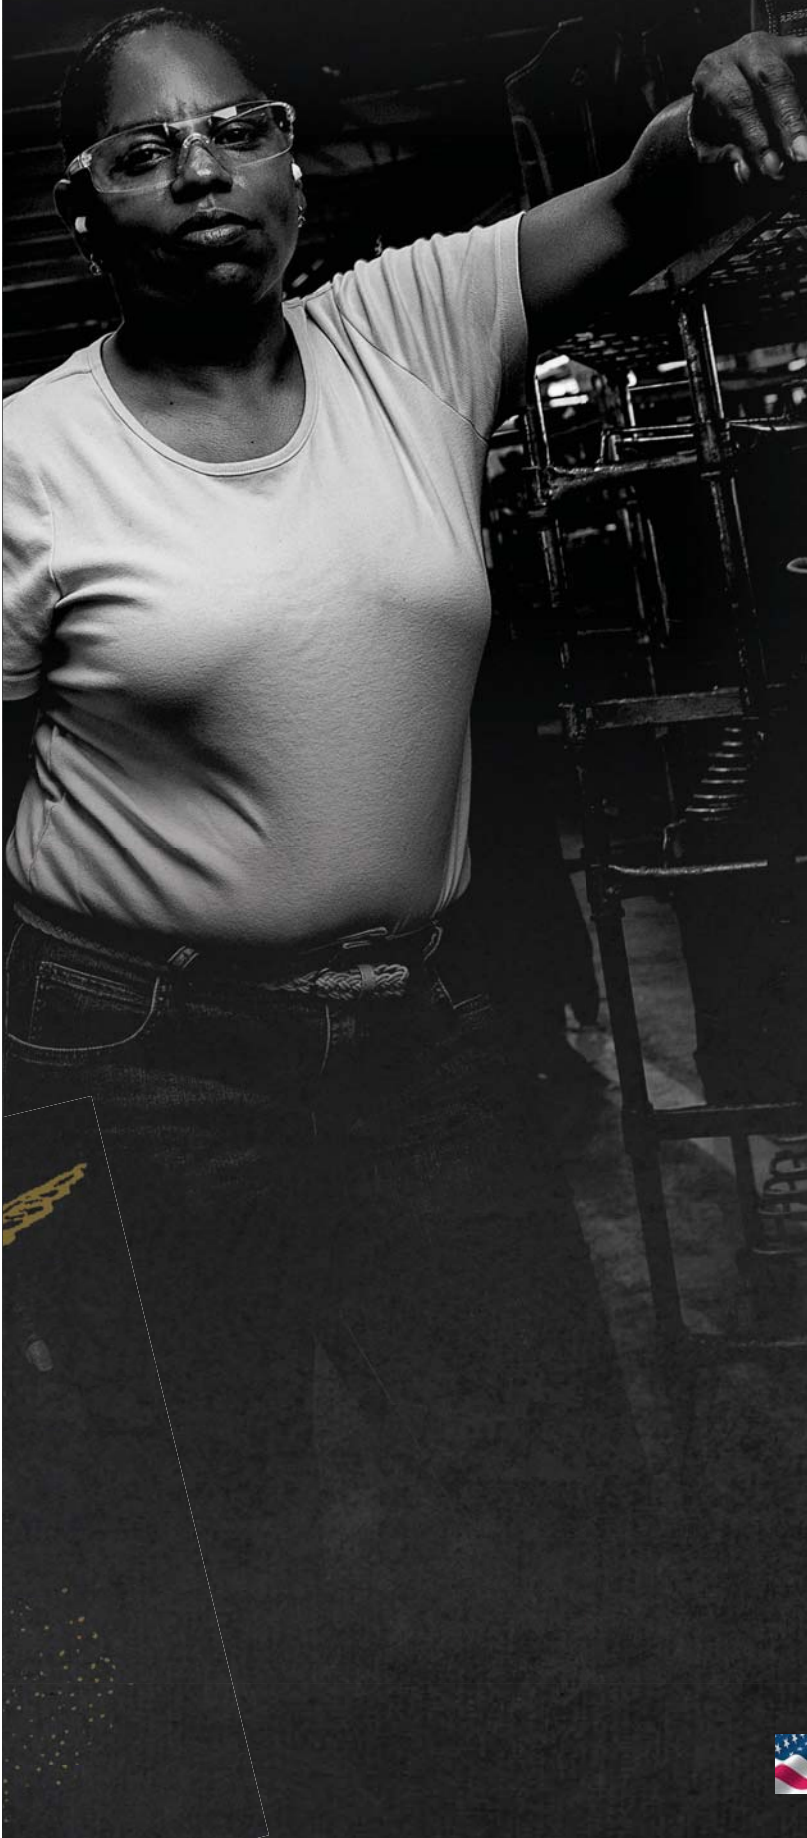

804-3366+

6" Plain Toe
Safety Toe



SOLE 5



889-3004

- » Trail crazyhorse leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



poron

MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-3310+

Wellington
Safety Toe



SOLE 5



889-3004

- » Trail crazyhorse leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Single-density polyurethane MAXwear 90 outsole
- » Goodyear storm welt construction



poron

MEN'S | D 7-12, 13, 14 | EE 7-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.

SIGNATURE SERIES

504-4406

Women's Double Track Oxford
Safety Toe

SOLE 8



589-6008



- » Root beer old west, tumbled, full-grain leather with contrast stitch
- » Removable polyurethane super cushion footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



WOMEN'S | M 6-11 | W 6-11

804-4760

Plain Toe Oxford
Safety Toe

SOLE 8



889-8000



- » Root beer old west, tumbled, full-grain leather
- » Removable dual-density polyurethane SHOCK ZONE footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

804-4860

6" Sport Hiker
Safety Toe

SOLE 8



889-8000



- » Root beer old west, tumbled, full-grain leather
- » Removable dual-density polyurethane SHOCK ZONE footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

814-4960

6" Sport Hiker
Non-Safety

SOLE 8



889-8000



- » Root beer old west, tumbled, full-grain leather
- » Removable dual-density polyurethane SHOCK ZONE footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



MEN'S | M 7-12, 13, 14 | W 7½-12, 13, 14



804-6000

6" Sport Hiker
Safety Toe



SOLE 8



889-8000

- » Black tumbled full-grain leather
- » Removable dual-density polyurethane SHOCK ZONE footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



MEN'S | M 7-12, 13, 14 | W 8-12, 13, 14

804-4890

6" Sport Hiker
Safety Toe



SOLE 8



889-8000

- » Dirty brown crazyhorse leather
- » Removable dual-density polyurethane SHOCK ZONE footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



MEN'S | D 8-12, 13, 14 | EE 8-12, 13, 14

804-4580

Wellington
Safety Toe



SOLE 8



889-8000

- » Root beer old west, tumbled, full-grain leather
- » Removable dual-density polyurethane SHOCK ZONE footbed
- » Signature series dual-density polyurethane outsole
- » Direct injection construction



MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14



*Our Made in USA footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.



GENflex2®



NO COMPROMISE...



IN COMFORT

- Lightweight and flexible
- Multi-layer cushion insole
- Shock absorbing



IN PROTECTION

- Composite Safety Toe



IN GRIP

- Multi-directional traction lug outsole
- Oil- and slip-resisting

804-4446

6" Plain Toe

Composite Safety Toe



- » Brown tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex2® dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 EH NM SR

ULTRA LIGHT + COMP 75 SAFETY TOE

MEN'S | M 7-12,13,14 | W 7-12,13,14

804-4448

8" Plain Toe

Composite Safety Toe



- » Brown tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex2® dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 EH NM SR

ULTRA LIGHT + COMP 75 SAFETY TOE

MEN'S | M 7-12,13,14 | W 7-12,13,14

814-4447

6" Plain Toe

Non-Safety

SR

MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14

814-4449

8" Plain Toe

Non-Safety

SR

MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14

804-6444
6" Lace-to-Toe
Composite Safety Toe



SOLE 9



- » Black oiled full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex²® dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 **EH** **NM** **SR** **3M Scotchlite**
 Reflective Material **HI-VIS**

ULTRA LIGHT **COMP 75 SAFETY TOE**

MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

804-4445
6" Lace-to-Toe
Composite Safety Toe



SOLE 9



- » Brown tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex²® dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 **EH** **NM** **SR** **3M Scotchlite**
 Reflective Material **HI-VIS**

ULTRA LIGHT **COMP 75 SAFETY TOE**

MEN'S | M 7-12, 13, 14, 15 | W 7-12, 13, 14, 15

804-4440
Side-Zip Wellington
Composite Safety Toe



SOLE 9



- » Brown tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex²® dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 **EH** **NM** **SR**

ULTRA LIGHT **COMP 75 SAFETY TOE**

MEN'S | M 7-12, 13, 14, 15 | W 7-12, 13, 14, 15

814-4440
Side-Zip Wellington
Non-Safety



SOLE 9



- » Brown tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex²® dual-density rubber / EVA outsole
- » Goodyear storm welt construction

SR

MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14



GENflex³

All day comfort from the ground up, these boots were designed with little to no "break-in" period.



Thorogood's exclusive GEN-flex³ technology features multi-directional traction outsoles, enhanced support, cushioned comfort, and forefoot flexibility.

804-4460

NEW

6" Waterproof / Insulated Composite Safety Plain Toe



SOLE 10



- » Brown waterproof tumbled oiled full-grain leather
- » Goodyear storm welt construction
- » Waterproof membrane bootie construction
- » B-400 Thinsulate™ insulation
- » Polyurethane removable footbed / special EVA cushion flex insole
- » EVA cushion with impact 300 gel heel insert
- » GEN-flex3 dual-density rubber / EVA outsole

75 EH NM WP SR

Thoro-dri™ 3M Thinsulate Ultra™ INSULATION WATERPROOF + COMP 75 SAFETY TOE

MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14

NO COMPROMISE...



IN COMFORT

- Lightweight and flexible
- Multi-layer cushion insole
- Shock absorbing



IN PROTECTION

- Waterproof
- Composite Safety Toe



IN GRIP

- Multi-directional traction lug outsole
- Oil- and slip-resisting

804-4456+
6" Waterproof
Composite Safety Toe



SOLE 10



- » Brown waterproof, tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex³ dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 EH NM WP SR

Thoro-dri™ WATERPROOF + COMP 75 SAFETY TOE

MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

804-4459+
8" Waterproof / Insulated
Composite Safety Toe



SOLE 10



- » Brown waterproof, tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex³ dual-density rubber / EVA outsole
- » Goodyear storm welt construction
- » 400 grams of 3M™ Thinsulate™ Ultra Insulation

75 EH NM WP SR

Thoro-dri™ Thinsulate™ Ultra INSULATION WATERPROOF + COMP 75 SAFETY TOE

MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

804-4450+
Waterproof Wellington
Composite Safety Toe



SOLE 10



- » Brown waterproof, tumbled, oiled, full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex³ dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 EH NM WP SR

Thoro-dri™ WATERPROOF + COMP 75 SAFETY TOE

MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

804-4441+
Waterproof Nylon Wellington
Composite Safety Toe



SOLE 10



- » 1200 denier nylon / brown waterproof full-grain leather
- » Polyurethane removable footbed / Special EVA cushion flex insole
- » GEN-flex³ dual-density rubber / EVA outsole
- » Goodyear storm welt construction

75 EH NM WP SR

Thoro-dri™ WATERPROOF + COMP 75 SAFETY TOE

MEN'S | M 7-12, 13, 14 | W 7-12, 13, 14

804-4650

⚠️ DUAL-GENDER SIZING [SEE CHART]

6" Brown Lace-to-Toe
Semi-Oblique Safety Toe



SOLE 11



- » Brown oiled nubuck leather
- » Oil-resisting EVA lug outsole
- » Wrapped cushion insole
- » Goodyear storm welt construction

75 EH SR

⚠️ MEN'S M 4-12, 13, 14, 15 | W 4-12, 13, 14, 15 |

804-4900

⚠️ DUAL-GENDER SIZING [SEE CHART]

6" Waterproof Hiker with
Oblique Composite Safety Toe



SOLE 12



889-8000



- » Brown waterproof, tumbled, oiled, full-grain leather
- » Dual-density rubber polyurethane outsole
- » Full-length removable dual-density polyurethane SHOCK ZONE footbed with air flow vents
- » Cement construction

75 EH NM WP SR Thoro-dri™

💧 WATERPROOF + COMP 75 SAFETY TOE

⚠️ MEN'S M 4-12, 13, 14, 15 | W 4-12, 13, 14, 15 |

804-3556

8" Waterproof Logger
Oblique Composite Safety Toe



SOLE 13




- » Brown trail crazyhorse, waterproof, oil-tanned leather
- » Rubber logger outsole
- » Removable full-length polyurethane footbed
- » Goodyear leather welt construction

75 EH WP SR

Thoro-dri™ 💧 WATERPROOF + COMP 75 SAFETY TOE

⚠️ MEN'S M 8-12, 13, 14 | W 8-12, 13, 14 |

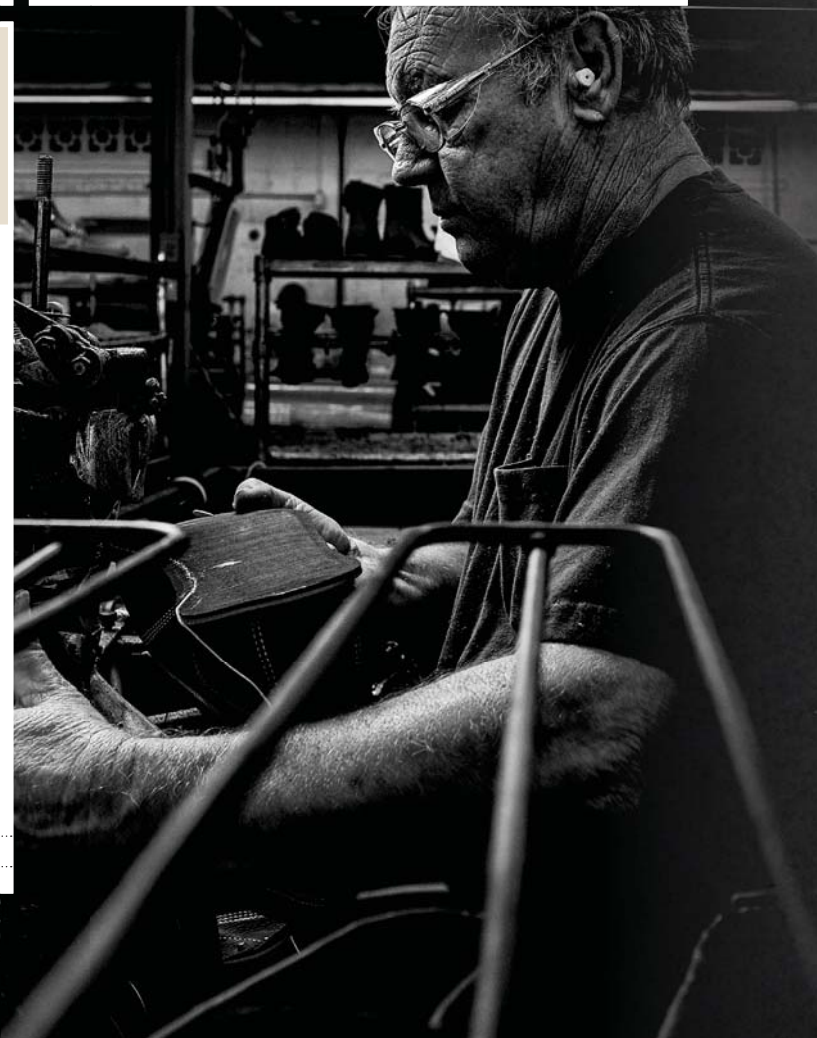

804-4808

▲ DUAL-GENDER SIZING [SEE CHART]

7" Waterproof
Composite Safety Toe



SOLE 14



Z-TRAC

- » Brown waterproof tumbled full-grain leather shaft / black armor-coated waterproof abrasion-resisting vamp and counter
- » Removable single-density polyurethane SHOCK ZONE footbed
- » Z-Trac ASR rubber outsole with integrated EVA impact pads
- » Cement construction

75 EH NM WP SR



▲ MEN'S | M 4-12, 13, 14, 15 | W 7-12, 13, 14, 15

804-4810

8" Waterproof Wellington
Composite Safety Toe



SOLE 14



Z-TRAC

- » Brown waterproof tumbled full-grain leather shaft / black armor-coated waterproof abrasion-resisting vamp and counter
- » Removable single-density polyurethane SHOCK ZONE footbed
- » Z-Trac ASR rubber outsole with integrated EVA impact pads
- » Cement construction

75 EH NM WP SR



▲ MEN'S | M 7-12, 13, 14, 15 | W 7-12, 13, 14, 15



Cross Over to Protection

Some occupations or projects require multi-purpose footwear, a boot that's a crossover between one style or function and another. It's a best-of-both worlds kind of thing. Thorogood's new line of work boots is all that and more, and a superb value for hard-earned dollars.

These boots are lightweight and waterproof, safety toed, and soled with our exclusive Z-Trac ASR super-grippy rubber outsole. We've covered the vamp and heel counter in black, armor-coating that's both abrasion resistant and impervious to most nasty fluids and materials.

These boots are perfect for:

- Oil Industry
- Chemical Industry
- Food Service and Processing
- Animal Processing
- Farming, Ranching, and Ag Industry
- Construction and Property Development



X-STREAM WATERPROOF™
Waterproof, abrasion-resistant vamp provides chemical protection and easy cleaning.



GREATER SLIP RESISTANCE
Sure footing with exclusive Z-Trac outsole that provides a gripping pad and a rugged lug for traction indoors and out.



DUAL GENDER SIZING

▲ For Women's size, order Men's size below it on chart. (example: Women's 6, order Men's 4)

WOMEN'S	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	10½	11	11½	12	13	14	15
MEN'S	3	3½	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10							



SUPERIOR FOOTWEAR TECHNOLOGY

Thorogood features built-in advantages that give the wearer an on-the-job edge.



ASR - Athletic Slip Resisting

Footwear featuring ASR technology is designed for sure-footed traction in any environment. The ASR designation signifies high-performance athletic comfort and superior footing, giving you the confidence to stand tall where others fear to tread.

- Exclusive tread pattern includes gripping pad and a rugged lug for maximum traction, indoors and out
- Dispersion channels shed moisture for superior slip resistance
- Specially formulated rubber sole grips surfaces for sure footing
- Lightweight, high-performance, true athletic construction
- 100% non-metallic

VGS - Visible Gel System

You can see exactly what makes Thorogood's exclusive Visible Gel System work so well: The improved shock-absorption of the VGS insert absorbs heel-to-ground impact, distributing forces that can cause injuries and fatigue.

- Absorbs shock with every step
- InterActive cushioning system
- Reduces impact stress where it's needed most
- Tested to withstand 300 pounds of pressure
- Won't deflate and never loses performance

SD - Static Dissipative

Dissipates static electricity: SD footwear meets ASTM F2413-11 test requirements by providing between 10 to the 6th power ohms (1 megohm) and 10 to the 8th power ohms (100 megohms) resistance under application of 50 volts.

- Prevents static shock
- Provides 1-100 megohm resistance
- Light, comfortable performance
- Protects sensitive electronic equipment
- 100% non-metallic



VGS-300 · ASR · SD

VGS-300 / ASR / SD

804-4061

▲ DUAL-GENDER SIZING [SEE CHART]

SD Slip-On Composite Safety Toe



SOLE 15



- » Brown tumbled full-grain leather
- » Removable polyurethane SD footbed

- » VGS-300 ASR dual-density rubber / EVA outsole
- » Cement construction

75 SD NM SR

ULTRA LIGHT + COMP 75 SAFETY TOE

▲ MEN'S | M 4-12, 13, 14 | W 6-12, 13, 14

804-6064

▲ DUAL-GENDER SIZING [SEE CHART]

SD Slip-On Composite Safety Toe



SOLE 15



- » Black tumbled full-grain leather
- » Removable polyurethane SD footbed

- » VGS-300 ASR dual-density rubber / EVA outsole
- » Cement construction

75 SD NM SR

ULTRA LIGHT + COMP 75 SAFETY TOE

▲ MEN'S | M 4-12, 13, 14 | W 6-12, 13, 14

804-4035

▲ DUAL-GENDER SIZING [SEE CHART]

ASR SD Sport Oxford Composite Safety Toe



SOLE 15



- » Brown tumbled full-grain leather
- » Removable polyurethane SD footbed

- » VGS-300 ASR dual-density rubber / EVA outsole
- » Cement construction

75 SD NM SR

ULTRA LIGHT + COMP 75 SAFETY TOE

▲ MEN'S | M 4-12, 13, 14 | W 6-12, 13, 14

804-4037

ASR SD Sport Hiker Composite Safety Toe



SOLE 15



- » Brown tumbled full-grain leather
- » Removable polyurethane SD footbed

- » VGS-300 ASR dual-density rubber / EVA outsole
- » Cement construction

75 SD NM SR

ULTRA LIGHT + COMP 75 SAFETY TOE

▲ MEN'S | M 7-12, 13, 14, 15 | W 7-12, 13, 14, 15



DUAL
GENDER
SIZING

▲ For Women's size, order Men's size below it on chart. (example: Women's 6, order Men's 4)

WOMEN'S	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12							
MEN'S	3	3½	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	13	14	15

804-4312

⚠️ **DUAL-GENDER SIZING** [SEE CHART]

**Hiker I-MET
Safety Toe**



SOLE 12



889-8000



- » Dark brown tumbled full-grain leather with black suede leather inserts and napa leather collar
- » Removable dual-density polyurethane SHOCK ZONE footbed with air flow vents

- » Dual-density rubber polyurethane outsole
- » Direct injection construction

75 EH MT I-M SR

⚠️ **MEN'S** | M 7-12, 13, 14, 15 | W 7-12, 13, 14, 15

804-4614+

**6" Lace-to-Toe I-MET
Safety Toe**



SOLE 16



- » Brown full-grain leather
- » Removable full-length polyurethane footbed on Poron® comfort cushion insole

- » Rubber chevron outsole
- » Goodyear storm welt construction

75 EH MT I-M SR

poron

⚠️ **MEN'S** | M 8-12, 13, 14 | W 8-12, 13, 14

804-4132

**8" Side-Zip Wellington I-MET
Safety Toe**



SOLE 17



889-6007



- » Dark brown regal soggy leather
- » Removable dual-density Ultimate Shock Absorption™ footbed

- » Vibram® #582 outsole with 90° heel
- » Goodyear storm welt construction

75 EH MT I-M SR

⚠️ **MEN'S** | M 7-12, 13, 14 | W 7-12, 13, 14

804-6511

⚠️ **DUAL-GENDER SIZING** [SEE CHART]

**6" I-MET
Safety Toe**



SOLE 7



- » Black oil-tanned full-grain leather
- » Removable polyurethane footbed on Poron® comfort cushion insole

- » Dual-density polyurethane comfort outsole with 90° heel
- » Goodyear storm welt construction

75 EH MT I-M SR

DRI-LEX poron

⚠️ **MEN'S** | D 4-12, 13, 14, 15 | EEE 8-12, 13, 14, 15



FLEXIBLE COMFORT TECHNOLOGY

X-STREAM WATERPROOF™ MEMBRANE CONSTRUCTION

NON-METALLIC PUNCTURE-RESISTING MIDSOLE

COMPOSITE SAFETY TOE

I-MET²

I-MET²

804-4320

▲ DUAL-GENDER SIZING (SEE CHART)

Slip-On I-MET² Composite Safety Toe



SOLE 15



- » Brown full-grain leather
- » Full-length removable polyurethane footbed

- » VGS-300 ASR dual-density rubber / EVA outsole
- » Cement construction

75 EH NM MT I-M² SR

ULTRA LIGHT + COMP 75 SAFETY TOE

▲ MEN'S | M 4-12, 13, 14 | W 6-12, 13, 14

804-4043

Sport Hiker I-MET² Composite Safety Toe



SOLE 14



Z-TRAC

889-6009

- » Brown full-grain leather
- » Removable VGS Motion Sensor dual-density polyurethane footbed with memory foam

- » Z-Trac ASR rubber outsole with integrated EVA impact pads
- » Cement construction

75 EH NM MT I-M² SR

ULTRA LIGHT + COMP 75 SAFETY TOE

▲ MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14

804-4616+

8" Waterproof Lace-to-Toe I-MET² Composite Safety Toe



SOLE 16



- » Brown waterproof tumbled oil leather
- » Full-length removable polyurethane footbed

- » Oil / slip-resisting chevron outsole
- » Goodyear storm welt construction

75 EH MT I-M² PR WP SR

X-STREAM WATERPROOF + COMP 75 SAFETY TOE

▲ MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14

NEW

804-4618+

Waterproof Wellington I-MET² Composite Safety Toe



SOLE 16



- » Brown waterproof tumbled oil leather
- » Full-length removable polyurethane footbed

- » Oil / slip-resisting rubber chevron outsole
- » Goodyear storm welt construction

75 EH MT I-M² PR WP SR

X-STREAM WATERPROOF + COMP 75 SAFETY TOE

▲ MEN'S | M 8-12, 13, 14 | W 8-12, 13, 14



DUAL GENDER SIZING

▲ For Women's size, order Men's size below it on chart. (example: Women's 6, order Men's 4)

WOMEN'S	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12							
MEN'S	3	3½	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	13	14	15

804-4541

▲ **DUAL-GENDER SIZING** [SEE CHART]

**6" I-MET²
Safety Toe**



SOLE 18



- » Black walnut oil-tanned full-grain leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Vibram® ALPHA+ outsole
- » Goodyear storm welt construction



DRI-LEX[®] poron

▲ **MEN'S** | D 4-12, 13, 14, 15 | EEE 8-12, 13, 14, 15

804-4831

**8" I-MET² Emperor Toe
Safety Toe**



MORE
SPACIOUS
TOE!



SOLE 18



- » Black walnut oil-tanned full-grain leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Vibram® ALPHA+ outsole
- » Goodyear storm welt construction



DRI-LEX[®] poron

MEN'S | D 7-12, 13, 14 | EE 8-12, 13, 14 | EEE 8-12, 13, 14

804-4531

**8" I-MET²
Safety Toe**



SOLE 18



- » Black walnut oil-tanned full-grain leather
- » Removable polyurethane footbed
- » Vibram® ALPHA+ outsole
- » Goodyear storm welt construction



DRI-LEX[®]

▲ **MEN'S** | D 4-12, 13, 14, 15 | EEE 8-12, 13, 14, 15

804-4841

**Wellington I-MET²
Safety Toe**



SOLE 18



- » Black walnut oil-tanned full-grain leather
- » Removable polyurethane footbed on Poron® comfort cushion insole
- » Vibram® ALPHA+ outsole
- » Goodyear storm welt construction



DRI-LEX[®] poron

MEN'S | D 4-12, 13, 14, 15 | EEE 8-12, 13, 14, 15





Keep Shoes Clean

Shoe In® fits over most shoes and boots.

Get a Grip

Shoe In® with Ice-Ts (Ice Traction System) protect footwear and reduce slipping.



SHOE IN®



ULTRA LIGHT

161-0777

Charcoal Open Toe

- » Lightweight EVA
- » Hands free
- » No left/right
- » Rinse off
- » Two slip-resisting rubber sole pads
- » Fits over most shoes or boots with unique patented design



161-7771
FOREST GREEN
OPEN TOE

SOLE 19



EXTRA SMALL

Women's 4-6½

SMALL

Men's 5-8½ | Women's 7-9½

MEDIUM

Men's 9-11 | Women's 10-11½

LARGE

Men's 11½-12 | Women's 12+

EXTRA LARGE

Men's 13+



ULTRA LIGHT

161-0888

Charcoal Closed Toe (Non-Safety)

- » Lightweight EVA
- » Hands free
- » No left/right
- » Rinse off
- » Two slip-resisting rubber sole pads
- » Fits over most shoes or boots with unique patented design
- » Flex groove design

SOLE 19



SMALL

Men's 5-8½ | Women's 7-9½

MEDIUM

Men's 9-11 | Women's 10-11½

LARGE

Men's 11½-12 | Women's 12+

EXTRA LARGE

Men's 13+



ULTRA LIGHT

161-0999

Charcoal Closed Toe Safety Toe

- » Steel toe: tested to, but not compliant with ASTM F2413-11
- » Two slip-resisting rubber sole pads
- » Lightweight EVA
- » Hands-free
- » No left/right
- » Rinse off
- » Fits over most shoes or boots for temporary safety toe protection
- » Flex groove design

SOLE 19



SMALL

Men's 5-8½ | Women's 7-9½

MEDIUM

Men's 9-11 | Women's 10-11½

LARGE

Men's 11½-12 | Women's 12+

EXTRA LARGE

Men's 13+



ULTRA LIGHT

161-0555

Charcoal Closed Toe Ice Traction System

- » Kick on over your shoes for traction on ice, snow, and mud
- » Lightweight EVA
- » Hands-free
- » No left/right
- » Rinse off
- » Two slip-resisting rubber sole pads
- » Fits over most shoes or boots with unique patented design
- » Flex groove design

SOLE 20



SMALL

Men's 5-8½ | Women's 7-9½

MEDIUM

Men's 9-11 | Women's 10-11½

LARGE

Men's 11½-12 | Women's 12+

EXTRA LARGE

Men's 13+

Your Shoe In® is made of high quality EVA material for lasting comfort. The shoe you wear with any Shoe In® will determine proper fit. No Shoe In® should be used for climbing or running as this may pose a potential trip hazard. Do not wear Shoe Ins while driving. Your Shoe In® cannot prevent all slips and falls. Shoe In® with Ice-Ts (Ice Traction System) should not be worn on non-ice covered surfaces. Shoe In® with Safety Toes is tested to the ASTM F2413-11 Standard but cannot comply with the standard. The ASTM F2413-11 Standard states no overshoe can meet or comply with the standard.



GENUINE THOROGOOD FOOTBEDS



889-6007

Ultimate Shock-Absorption™ Footbed as found in classic oxfords



Made in USA*

MEN'S SIZES ❄️

S 7-9
M 9½-11
L 11½-13
XL 14-15



889-6008

SUPER CUSHION Thick Polyurethane Footbed as found in SoftStreets™



Made in USA*

MEN'S SIZES ❄️

S 7-9
M 9½-11
L 11½-13,14



DUAL GENDER SIZING

▲ For Women's size, order Men's size below it on chart. (example: Women's 6, order Men's 4)

WOMEN'S	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12																						
MEN'S	3	3½	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	13	14	15															



889-8000

The Deuce Two-Density Polyurethane SHOCK ZONE Footbed as found in all The Deuce footwear.

MEN'S SIZES ❄️

XS 4-5½
S 6-7½
M 8-9½
L 10-11½
XL 12-13½
XXL 14-15



889-7024

Compression foam footbed

MEN'S SIZES ❄️

XS 5-6½
S 7-8½
M 9-11½
L 12+

SHOCK ZONE INSERT

The SHOCK ZONE has become our best-selling removable insert. It's the go-to footbed for Weinbrenner dealers like Roger, a Thorogood dealer in central Ohio, who says: "If anyone comes into my store complaining of foot pain, discomfort, or fatigue, I immediately put a pair of SHOCK ZONE inserts into their boots. Problem solved!"

SOLE COMPARISONS

THOROGOOD® USA EXCLUSIVE

1	2	3	4	5	6	7	8
DUAL-DENSITY POLYURETHANE MAXWEAR WEDGE™	SINGLE-DENSITY POLYURETHANE MAXWEAR WEDGE™	SINGLE-DENSITY POLYURETHANE MAXWEAR WEDGE™	SINGLE-DENSITY MAXWEAR 90 POLYURETHANE	SINGLE-DENSITY MAXWEAR 90 POLYURETHANE	DUAL-DENSITY POLYURETHANE COMFORT OUTSOLE WITH 90° HEEL	DUAL-DENSITY POLYURETHANE COMFORT SOLE WITH 90° HEEL	SIGNATURE SERIES DUAL-DENSITY POLYURETHANE SOLE
A A C B A	A A C B B	A A C B A	A A B B B	A A B B B	A A C B A	A A C B A	A A C A A

VIBRAM® USA

17	18	21
VIBRAM® #582 SOLE WITH 90° HEEL	VIBRAM® ALPHA+ SOLE	VIBRAM® TACOMA LOGGER
A A A A B	A A A A B	A C A B A

KEY

- ABRASION-RESISTING
- OIL-RESISTING
- HEAT-RESISTING
- CHIP-RESISTING
- SLIP-RESISTING

A = BEST
B = BETTER
C = GOOD

THOROGOOD® EXCLUSIVE

9	10	14	15
GEN-FLEX2® DUAL-DENSITY RUBBER / EVA SOLE	GEN-FLEX3® DUAL-DENSITY RUBBER / EVA SOLE	Z-TRAC ASR RUBBER / EVA SOLE	VGS-300 ASR DUAL-DENSITY RUBBER / EVA SOLE
A A C A A	A A A A A	A A A B A	A A C C A

THOROGOOD®

11	12	13	16	19	20
EVA LUG SOLE	DUAL-DENSITY RUBBER POLYURETHANE SOLE	RUBBER LOGGER SOLE	RUBBER CHEVRON SOLE	SHOE IN® EVA WITH SLIP-RESISTING RUBBER PADS	SHOE IN® EVA WITH ICE-TS ICE TRACTION CLEATS
B A C C B	A A C B A	A A A A A	A A A A A	B A C C A	B A C C A

THOROGOOD POINT OF PURCHASE



- 500 Slatwall Shelves
- 501 2' x 4' Union Logo Banner
- 502 2' x 4' Banners
- 503 3' x 5' Floor Mats
- 508 Sock Racks - Floor
- 509 Sock Racks - Counter
- 520 Blank 8½" x 11" Acrylic Slatwall Sign Holders
- 531 GEN-flex2 Display
- 547 Tower Display
- 551 Quik Shine Sponge
- 552 Thorogood Boot Bag
- 554 Mink Oil
- 560 VGS Boot Talker - Short
- 561 VGS Boot Talker - Tall
- 562 ASR Boot Talker - Short
- 563 ASR Boot Talker - Tall
- 564 GEN-flex2 Boot Talker - Short
- 565 GEN-flex2 Boot Talker - Tall
- 566 VGS Sole Ring/Talker
- 568 USA Boot Talker - Short
- 569 USA Boot Talker - Tall



501



502



500



503



547




531



- 549 Shoe-In Floor Spinner (24 Pair)
- 550 Shoe-In Floor Rack (48 Pair)
- 567 Shoe-In Boot Talker (Shoe-In not included)

549

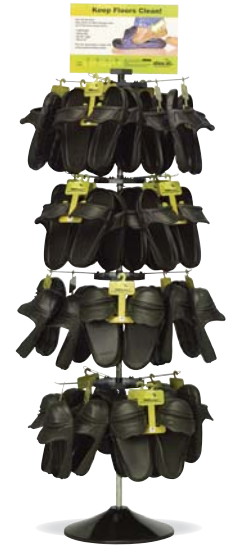

550



561



563



565



569



552



551



554



566



567

QUALITY IS EARNED

As part of the Weinbrenner family of footwear brands, Thorogood has quietly led the way in craftsmanship, innovation, comfort, and quality control since 1892. That means you're buying boots and shoes that are suited to your needs, durable, and reliable under the harshest conditions.

As an employee-owned company, we are particularly committed to customer satisfaction. Our rigorous quality-assurance practices and testing protocols—from design to service after the sale—are second-to-none in the industry. In that tradition we have implemented a Quality Management System which conforms to International Standard ISO 9001.

RETURNED GOODS POLICY

Thorogood and Weinbrenner Shoe Company stand behind all our products 100% for defects in materials and workmanship. All claims are reviewed by our Quality Control Department (QCD) for evidence of defect as follows:

- Dealer submits Authorization to Return for approval by us
- Dealer submits product for inspection
- Our QCD inspects product and makes determination of defect
- If defective, a replacement or credit is issued based on amount of wear to product

Note: Credit will not be issued for:

- Abused footwear
- Excessive wear
- Lack of legitimate defect in materials or workmanship

For minor defects, the consumer may prefer to be reimbursed for a quick or inexpensive repair. These may include eyelet, hook, D-ring, or rivet replacement, seam stitching, sole or heel reattachment, etc. We will reimburse or credit dealers up to \$15 US for such repairs completed at a local shoe repair shop. Simply send a paid receipt to WSC Customer Service for reimbursement or credit.

PRODUCT CHANGE NOTICE

This Thorogood catalog is accurate as of the date of printing. However, in our never ending pursuit of better materials and construction there may be product specification changes made during the year without notice. The Thorogood price list is your official list of stock numbers available.

THOROGOOD®, THORO-DRI™, THOROGOOD SOCKWEAR™, THOROGOOD OMEGA™, POLY-PILLOW FOOTPACER™, THE ULTIMATE®, ULTIMATE SHOCK-ABSORPTION™, SOFT STREETS™, I-MET®, HELLFIRE™, and SHOE IN® are registered trademarks of the Weinbrenner Shoe Company, Inc.

- VIBRAM® and the Yellow Octagonal Label are registered trademark of Vibram S.p.A. of Italy. Quabaug Corporation, North Brookfield, MA, is the North American manufacturer of Vibram soiling products under exclusive license.
- SYMPATEX® is a registered trademark of Sympatex Technologies GmbH.
- KEVLAR® is a registered trademark of DuPont.
- 3M™ THINSULATE™, THINSULATE™ ULTRA, and SCOTCHLITE™ are trademarks of 3M™.
- PORON® is a registered trademark of Rogers Corporation.
- DRI-LEX® is a registered trademark of Faytex Corporation.
- MAXUM® is a registered trademark of Meramec Group.
- COOLMAX® is a registered trademark of Invista.
- L-PROTECTION® is a registered trademark of Lenzi Egisto S.p.A.

WEINBRENNER SHOE COMPANY: ISO 9001 CERTIFIED SINCE 1998

108 S. Polk Street · Merrill, WI 54452
1-800-826-0002
www.thorogoodshoes.com

KEY

To make your selection easier, we have included symbols that call your attention to important features built into the shoes throughout this catalog. Tested and certified to meet the rigid standards established by the American Standard Test Method (ASTM), all of our safety footwear meets or exceeds the highest ASTM F2413-11 ratings for impact, compression, and metatarsal (where applicable).

Produced by



UNION MADE IN THE USA*

*Weinbrenner Shoe Company manufactures our **Made in USA** footwear at its two factories in Wisconsin. Our **Made in USA** footwear is either Berry Compliant (100% Made in the USA with USA components) or Made in the USA with domestic and globally sourced components.



ULTRA LIGHT Lightweight materials and construction designed with foot comfort in mind.



Featuring 3M™ Thinsulate™ insulation



Composite safety toe caps provide the same protection as steel, but are non-metallic, corrosion resistant, transmit less cold and weigh less.



Class I/75 footwear retains a .500 inch (1/2 inch) for men's and .468 inch (15/32 inch) for women's or greater clearance after a nominal impact of 75 foot-pounds (101.7J), i.e., a 50 pound weight dropped, reaching 117.9 ± 2.4 inches per second velocity at impact. COMPRESSION: Class C/75 footwear retains a .500 inch (1/2 inch) after compression of 2500 lbs. (11,121 N) or greater. Meets ASTM F2413-11 M I/75/C/75 ratings.



These styles are 100% non-metallic utilizing composite toes and non-metallic hardware (eyelets). These features will help minimize the chance of marking / scratching work surfaces and will not activate security screening devices.



SYMPATEX®: Breathable, waterproof lining/barrier capable of resisting blood-borne pathogens. ThoroDri™: A waterproof breathable lining/membrane with waterproof taped seams capable of resisting blood-borne pathogens. Seam seal: Constructed with waterproof upper materials that have all upper stitch seams sealed with a waterproof adhesive.



Puncture-resistant through the sole and heel area at a force load of 1200N (270 lbf) according to ASTM F 2413-11, Standard Test Method for Foot Protection. Unique textile insole material is flexible and puncture-resisting.



SD footwear will provide for a resistance of between 10 to the 6th power ohms (1 megohm) and 10 to the 8th power ohms (100 megohms) resistance when 50 volts are applied via an electrode to the hand of a person wearing the SD test sample on a conductive ground plate. SD footwear meets ASTM F2413-11 test requirements.



Footwear meets or exceeds the ASTM F2913-11 SATRA Test Method TM144 (or Mark II) Standard for slip resistance.



Constructed or manufactured with electric shock-resisting soles and heels capable of withstanding an application of 18,000 volts (root mean square (RMS) value) at 60 Hz for 1 minute with no current flow or leakage current in excess of 1.0 milliamperes under dry conditions. Meets ASTM F2413-11.



Class ASTM F2413-11 Mt/75 footwear retains a 1.0 inch clearance for men's and .937 inch clearance for women's, after a nominal impact of 75 foot pounds (101.7J), i.e., a 50 lb. weight dropped, reaching 117.9 ± 2.4 inches per second velocity at impact 3.5 inches in from the toe of the footwear (3.375 inches on women's).



A breakthrough in metatarsal protection, exclusively from Thorogood® features the only internal, invisible, Metatarsal Guard that's completely integrated with the safety toe cap.



Exclusively from Thorogood® Footwear. The polymer compound used in the I-MET2 absorbs and deflects impact to the instep of the foot. Like the original I-MET, I-MET2 is an internal, invisible, Metatarsal Guard that's completely integrated with the protective toe cap.



3M Thinsulate Ultra™ contains a minimum of 400 grams+ of 3M™ Thinsulate Ultra Insulation throughout.



Designed with 3M™ Scotchlite™ Reflective Material for enhanced visibility in low light working conditions.



Dri-Lex fabrics are engineered specifically for footwear applications. A range of technical textile structures and high performance fibers give Dri-Lex excellent moisture movement properties as well as outstanding abrasion resistance, hand-feel, and attractive patterns and textures.



are indicated by a yellow highlight.



THOROGOOD BRAND OCCUPATIONAL FOOTWEAR
HAS BEEN KEEPING HARD-WORKING AMERICANS
SAFE AND COMFORTABLE SINCE 1892.

A division of the Weinbrenner Shoe Company,
Thorogood's relentless focus on craftsmanship, innovation, and comfort
recognizes the importance of footwear to your livelihood and getting the job done.
Our goal is that you never have to worry about your feet.

WEINBRENNER SHOE COMPANY

108 S. POLK STREET · MERRILL, WISCONSIN 54452
1-800-826-0002

THOROGOODSHOES.COM

ISO 9001 Certified Since 1998
An Employee-Owned Shoe Company



OTHER CATALOGS AVAILABLE



THOROGOOD FIRE

THOROGOOD UNIFORM

WOOD N' STREAM

1892